

*Sabaj*

**WP2**

高解析音频播放器



使用说明书

深圳市大号科技有限公司

## 安全注意事项

- 请将本音响系统安装在通风良好、阴凉、干燥、干净的位置，远离直射阳、热源、振动、灰尘、潮湿或寒冷。
- 本机的上面，请不要放置下列物品：
  - 其他装置。因为这样有可能会致损坏 或导致本机表面变色。
  - 可燃物品（例如蜡烛）。因为这样有可能导致火灾而损坏本机或造成人身伤害。
  - 装有液体的容器。因为有容器反倒，液体流淌的可能，如此有可能导致用户触电或 损坏本机。
- 不要在本机上面覆盖报纸，台布，窗帘等，以免妨碍散热。如果本机内部温度过高，则有可能导致火灾，损坏本机 或造成人身伤害。  
在使用开关，旋钮 或缆线时，不要用力过猛。
- 只能使用本机指定的电压。使用高于指定数值的电压很危险，而且可能导致火灾，损坏本机或造成人身伤害。对于使用高于指定电压造成的任何损害，深圳市大号科技有限公司将不负任何责任。
- 不要试图自行改造或修理本机。如果需要任何服务，请就近与有资格的深圳市大号科技有限公司维修人员联系。不管有任何理由，都没有打开机壳的必要。
- 如果打算长时间不使用本机（比如度假时），请从墙壁交流电源插座上断开电源线的连接。
- 为了加强对于本产品的保护，在雷电期间，或无人管理时以及长时间不使用时，请将电源线从墙壁上的电源插座上拔下。这样将防止该产品在闪电和电网出现电涌时受到损害。

## 特点

- 支持 MP3, APE, FLAC, WAV, WMA, AAC, CUE等多种音乐格式播放。
- 独特时尚的设计, 针对桌面使用进行了优化! 使用美国ANALOG公司(ADI)高性能DAC芯片—AD1955A。
- 内置大功率超低失真耳放电路, 超高的电压摆幅,极致的瞬态特性。
- 具有模拟, 耳放, 光纤, 同轴输出。
- 大量使用音频专业发烧级元件人性化菜单操作。
- 全铝CNC加工外壳, 做工十分精细。
- 全功能红外遥控功能和人性化操作菜单。
- 1.54吋高分辨率全彩IPS显示屏。

## 技术参数

输入接口 .....	micro SD
micro SD 系统格式 .....	FAT, FAT32
输出接口 .....	RCA, 6.35mm耳机口, 光纤, 同轴
THD+N .....	RCA: 0.0004%
	6.35mm耳机口: 0.003%
动态范围 .....	117dB
SNR .....	RCA:116dB
	6.35mm耳机口:105dB
耳放输出功率 .....	165mW(64Ω)
位深 .....	16bit, 24bit
采样率 .....	PCM: 44.1kHz~192kHz
光纤/同轴输出 .....	位深: 16bit, 24bit
	采样率: 44.1kHz~192kHz
文件格式.....	MP3, APE, FLAC, WAV, WMA, AAC, CUE等
电源输入 .....	5V(500mA以上)
消耗功率.....	2.5W
待机功耗.....	0.5W
体积.....	45x120x162mm (WxHxD)
重量.....	400g

## 关于遥控器

- 如果遥控器距离本机很近时操作仍无效，请用新电池更换。
- 如果要长时间不使用遥控器，请取出遥控器的电池。
- 按照电池处置的地方性法规处置废旧电池。


## 遥控器的使用



## 注意

1. 遥控器请使用2节7号(AAA)电池
2. 第一次操作 WP2 时，先按 B 键

## 技术参数

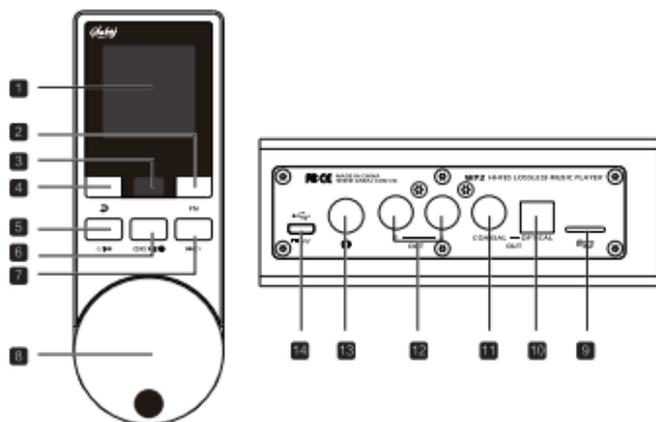

- |               |                    |             |
|---------------|--------------------|-------------|
| 1 显示屏         | 2 功能按键             | 3 红外遥控接收窗   |
| 4 返回/退出       | 5 左翻/上一曲/快退        | 6 开关机/OK/播放 |
| 7 右翻/下一曲/快进   | 8 旋钮               | 9 MICRO SD  |
| 10 光纤输出       | 11 同轴输出            | 12 线路输出     |
| 13 6.35mm耳机输出 | 14 电源DC5V(500mA以上) |             |

## 操作说明

### OK键

长按开关机  
在播放界面下：短按播放/暂停  
在设置与菜单下：短按确认

### 左右按键(遥控) / </> (主机)

在主界面下：切换菜单  
在播放界面下：  
短按为上一曲/下一曲  
长按为快进/快退  
在音乐库下：上翻一页/下翻一页

### 上下按键(遥控)/旋钮(主机)


在主界面下：加减音量  
在音乐库下：上翻/下翻

### 功能按键(FN键)


在播放界面下：  
短按进入音乐设置菜单  
长按为A-B模式  
在音乐库下：删除歌曲

## 界面介绍

### 1. 主界面

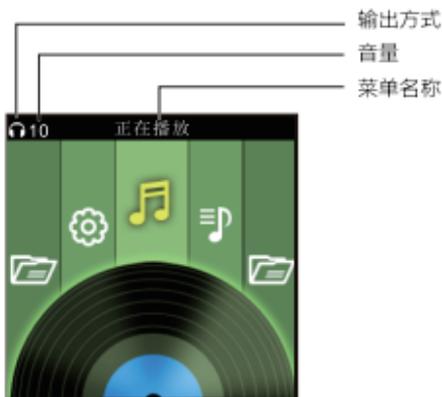

### 2. 播放界面

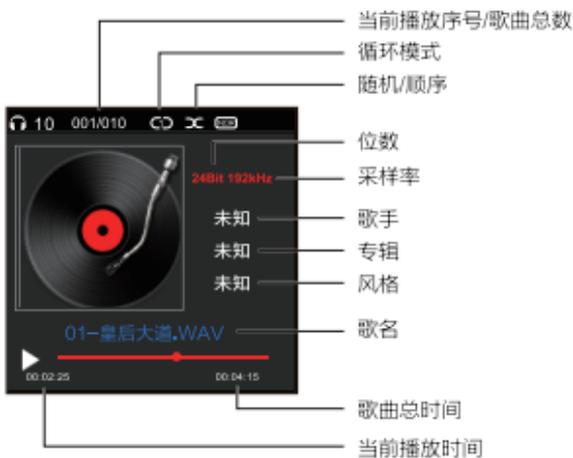

## 设置介绍



### 音乐设置

音乐设置菜单在播放界面下按FN(功能菜单)键进入。

- 随机和顺序：设置播放模式为随机播放或顺序播放。
- 循环模式：可以设置为目录播放、目录循环、单目循环、全部一次、全部循环。
- 快进方式：加速模式、匀速模式。



### 输出模式

- 1.输出模式：RCA模式、耳放模式。
- 2.屏幕设置：屏幕关闭定时器、亮度设置。
- 3.自动关机：关闭、1分钟、5分钟、10分钟。
- 4.产品信息。
- 5.语言设置：简体中文、繁体中文、English、한글、日本語、Español、Français、Deutsch、Italiano、Português、русский、Svenska、עברית、Arabic、języku polski、Dansk、Hollands、Ελληνικά、čísťina、Türkçe、תענית、תענית、Arabic。
- 6.高级：恢复系统默认值、格式化SD卡。

# *Sabaji*

## **WP2**

Hi-Res Lossless Music Player



USER MANUAL

Shenzhen DaHao Technology Co.,Ltd.

## Safety Notes

- Install this unit in a well ventilated, cool, dry, clean place-away from direct sunlight, heat sources, vibration, dust, moisture, or cold..
- On the top of this unit, do NOT place:
  - Other components, as they may cause damage or discoloration on the surface of this unit.
  - Burning objects (i.e. candles) , as they may cause fire , damage to this unit , or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user or damage to this unit.
- Do not cover this unit with a newspaper, tablecloth, curtain , etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, or personal injury.
- Do not attempt to modify or fix this unit. Contact qualified Sabaj service personnel when any service is needed. The cabinet should never be opened for any reason.
- When not planning to use this unit for long periods of time ( i. e. when going onvacation), disconnect the power cable from the AC wall outlet.
- When not planning to use this unit for long periods of time (i.e. when going on vacation), disconnect the power cable from the AC wall outlet.
- For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

## Features

- Unique and stylish design, optimized for desktop use!
- Support MP3, APE, FLAC, WAV, WMA, AAC, CUE and other music formats.
- High performance DAC chip AD1955A from ADI USA.
- Built-in high-current low THD+N headphone amplifier.
- With RCA and Headphone analog output.
- With coaxial and optical digital output.
- Use a lot of audio grade components.
- Aluminum CNC milling chassis.
- Full function remote control and humanized UI design.
- 1.54" full color IPS TFT-LCD.


## Specifications

Input .....	micro SD
Micro SD system format .....	FAT,FAT32
Output .....	RCA,6.35mm Headphone,Optical / Coaxial
THD+N .....	RCA: 0.0004%
	6.35mm Headphone 0.003%
Dynamic range .....	117dB
SNR .....	RCA:116dB
	6.35mm Headphone 105dB
Amp output power .....	165mW(64Ω)
Bit depth .....	16bit ,24bit
Sampling rate .....	PCM 44.1kHz~192kHz
Optical/coaxial .....	Bit depth: 16bit ,24bit
	Sampling rate: 44.1kHz~192kHz
file format .....	MP3,APE,FLAC,WAV,WMA,AAC,CUE
power input .....	5V(>500mA)
Power Consumption .....	2.5W
Standby power .....	0.5W
Size .....	45x120x162mm (WxHxD)
Weight .....	400g

## Remote control

- Install 2 x AAA batteries as instructions.
- When using the remote control, point it toward the remote control signal receiver on the main unit from a distance of 5 m (16 ft) or less. Do not place obstructions between the main unit and the remote control.
- The remote control might not work if the remote control signal receiver on the unit is exposed to direct sunlight or bright light. If this occurs, try moving the unit. Beware that use of this remote control could cause the unintentional operation of other devices that can be controlled by infra.


## Operating the remote control

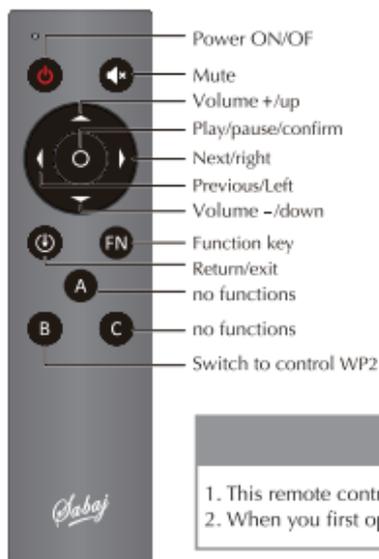

### Note

1. This remote controller use 2 x R03/AAA batteries.
2. When you first operate WP2, press the B key first.

## Specifications

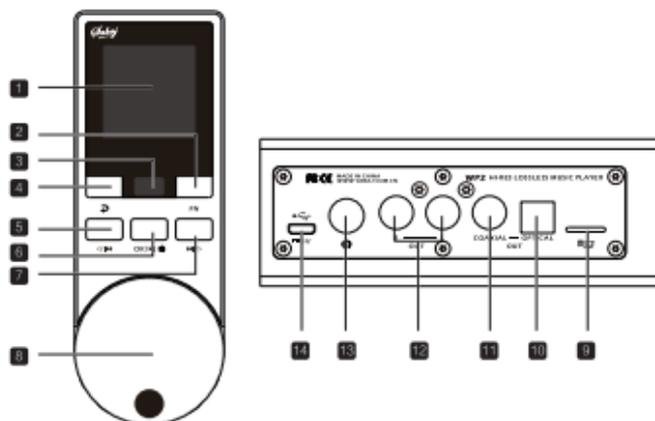

- |                    |                              |
|--------------------|------------------------------|
| 1 Display          | 8 Konb                       |
| 2 MENU (FN Button) | 9 MICRO SD                   |
| 3 Remote Sensor    | 10 Optical output            |
| 4 Return           | 11 Coaxial output            |
| 5 Left/Previous    | 12 Line output               |
| 6 NO/OFF/OK/Play   | 13 6.35mm headphone jack     |
| 7 Right/Next       | 14 Power supply DC5V(>500mA) |

## Instructions

### OK Button:

- Hold to Power ON/OFF
- In Player View: Press to Play/Pause
- In Setup Menu: Press to Confirm

### LEFT/RIGHT(remote)/ </> (unit)

- In Main View: Switch Items
- In Player View:
  - Press to Prev/Next
  - Hold to Fast Backward/Forward
- In Music Browsing:
  - Page up/Page down

### Up Dwon Button(remote) / Konb (unit)

- In Player View: Volume up/down
- In Music Browsing: Page up/down

### Menu Button(FN)


- In Player View:
  - Press is playback menu
  - Hold is A-B repeat setting
- In Music Browsing: Delete songs

### Note:


Be careful of this operation, it will remove your songs from the Micro SD card.

## Interface introduction


### 1. Main View

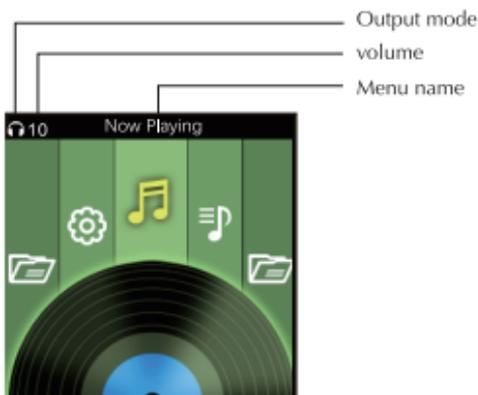

### 2. Player View

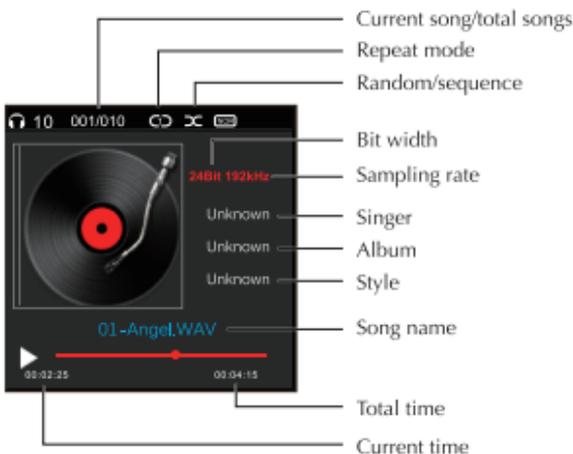

## Setting introduction

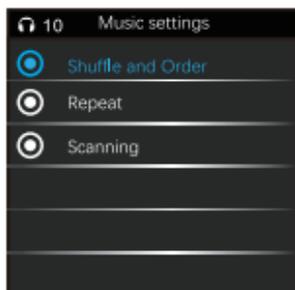

### Music Settings

The music setting menu is entered by pressing the FN button in the playback interface.

- Shuffle and Order:
  - Order
  - Shuffle
- Repeat:
  - Normal
  - Repeat
  - Repeat 1 Song
  - All Once
  - All Repeat
- Scanning:
  - Accelerating Mode
  - Uniform Mode

### Output Mode

1. Output Mode:
  - RCA Mode
  - HPA Mode
2. Common Settings:
  - Screen off Timer
  - Brightness.
3. Auto Power off:
  - OFF
  - 1 Minute
  - 5 Minute
  - 10 Minute
4. Information.
5. Language: 简体中文、繁體中文、English、한글、日本語、Español、Français、Deutsch、Italiano、Português、русский、Svenska、ភាសាខ្មែរ、języku polski、Dansk、Hollands、Ελληνικά、čísťina、Türkçe、תענית, תענית, Arabic.
6. Initialize:
  - Restore ALL Setting
  - Format SD Card